






# Quantum Diagnostics


## SINGLE DRUG CASSETTES

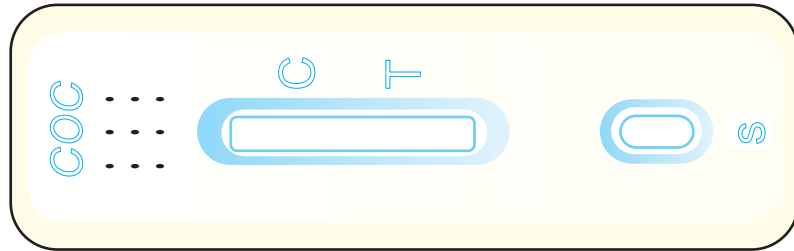


1. Open foil pouch & remove cassette & pipette.

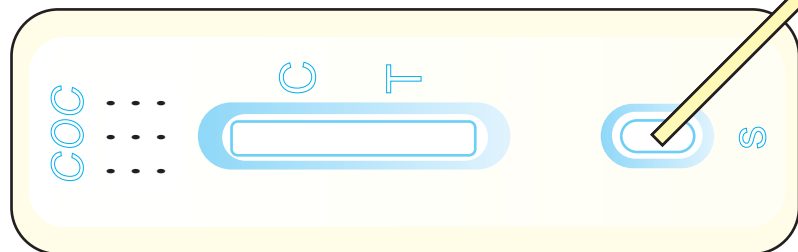

2. Place 3 drops of urine into the sample well.

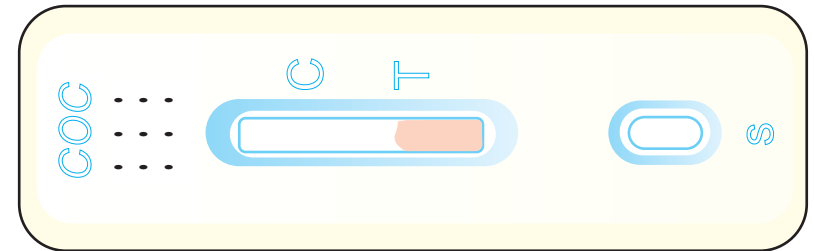

3. Observe the test reacting.

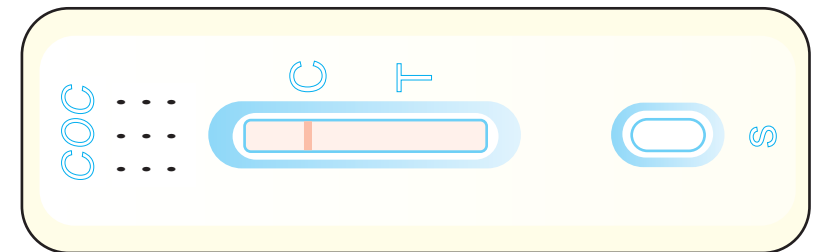

4. Read test result at 5 mins.  
(The illustration shows a positive result)

For further help or information call Quantum Diagnostics on 01992 651 111